

# Gid SOIL la pou Asenisman Ekolojik®

Premye Edisyon, Fevrye 2011



## Devi

Pri inite yo baze sou pri nan  
Pòtoprens en 2010

Tit	Kantite	Inite	Pri inite (H\$)	Pri total (H\$)
Ranblè	3	Kamyon 6m <sup>3</sup>	450	1350
Gravye	2	Kamyon 6m <sup>3</sup>	800	1600
Sab	2	Kamyon 6m <sup>3</sup>	800	1600
Siman	55	Grenn	60	3300
Blòk 15	170	Grenn	5	850
Planch (pou kofraj)	10	Grenn	120	1200
Bwa 2*4, 16" (Poto)	21	Grenn	135	2835
Bwa 2*4, 16" (Twati)	21	Grenn	135	2835
Bwa 1*4, 14" (Panno mi)	65	Grenn	80	5161,5
Bwa 1*4, 14" (Twati)	22	Grenn	80	1760
Twil poulaye 1/4", 100'x3'	9	Grenn	450	4050
Palèt	32	Grenn	50	1600
Fèy tòl	80	Grenn	65	5200
Klou tòl	20	Liv	40	800
Klou 4"	10	Liv	40	400
Klou 2,5"	10	Liv	40	400
Tiyo PVC 4", 10'	1	Grenn	50	50
Droum 15 galon	3	Grenn	200	600
Lokasyon malaksè	1	Fòfè	500	500
Penti	2	Galon	100	200
			<b>Total H\$</b>	<b>36,292</b>
			<b>Total HTG</b>	<b>181,458</b>
			<b>Total USD</b>	<b>4,536</b>
<b>Total materyèl + travay:</b>			<b>Total H\$</b>	
			<b>Total HTG</b>	
			<b>Total USD</b>	



Foto K1:

Strikti konpòs Mk.I: Yon senp strikti an bwa, tou jis dèyè twalèt la, san gen baz, san gen twati.

Kote li ye: Okap



Foto K2:

Strikti konpòs Mk.II : Twati a ak pan mi yo fè yon ang, yo fèt ak bwa epi tòn, pa gen baz atè.

Kote li ye: Okap



Foto K3 a,b,c:

Strikti konpòs Mk.III : Mi an blòk, baz an beton ki gen drenaj, twati a an bwa epi tòl e ou ka retire l.

Kote li ye: Okap



Foto K4:

Strikti konpòs Mk.IV : Mi fèt ak palèt bwa, strikti a long, baz la se tè.



Foto K5 a,b:

Strikti konpòs Mk.V : konntenè an asye ke nou modifye, nou mete tiyo pou lè pase, twou pou moun pase anlè, nechèl pou monte epi yon pouli.

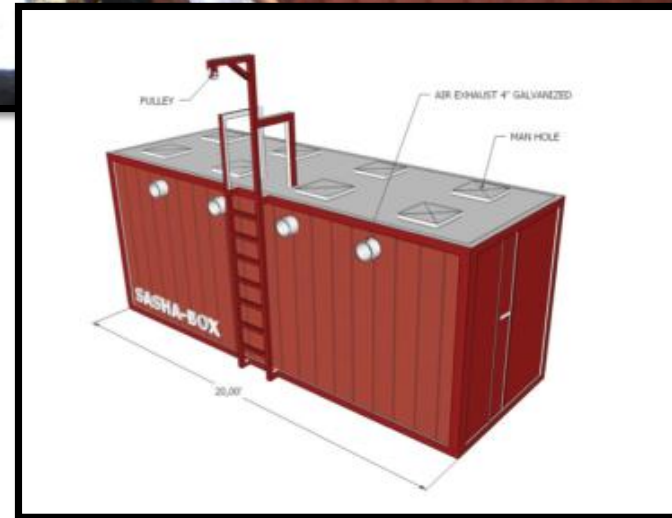




Foto K6 a,b,c:

Strikti konpòs Mk.VI : mi fèt ak palèt bwa epi sak pit, baz la se tè, epi li kouvri ak gwo fèy plastik.



Foto K7:

Strikti konpòs Mk.VII : mi fèt ak palèt bwa epi sak pit, strikti a kare, baz la an beton, li gen yon ti pant ak drenaj, ti mi perimèt la fèt ak blòk.



Foto K8 a,b:

Strikti konpòs Mk.VIII Compost Structure: Mi deyò yo fèt ak sak pit, konpatiman yo separe ak mi an bwa, baz la se beton epi li gen yon ti pant ak drenaj, nou ka retire twati a..



Foto K9:

Strikti konpòs Mk.VIX : Mi yo fèt ak palèt bwa epi bagas, mi separasyon konpatiman yo fèt ak bagas, baz la an beton ak yon ti pant pou drenaj, twati pèmanan.



Foto K10:

Strikti konpòs Mk.X : Mi fèt ak palèt epi bagas, mi separasyon konpatiman yo fèt ak bagas, baz an beton ak pant ki mennen sou PLIZYE dren, twati pèmanan.



Foto K101:

Baz an beton ak poto an bwa.



Foto K102:

Finisyon baz beton an : siraj.





Foto K103:

Y ap mete poto yo an plas anvan yo koule baz beton an.



Foto K104:

Ti mi blòk pou fè 6 konpatiman konpòs yo.

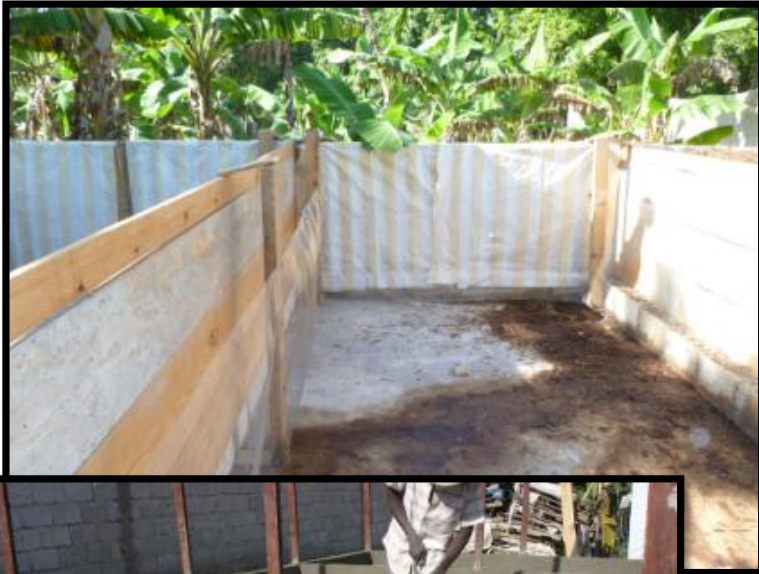


Foto K105:

Ji kaka ap koule nan mi blòk la anndan strikti konpòs la.



Foto K107:

Y ap sire mi blòk la pou anpeche ji kaka a koule ladann.



Foto K106:

Ji kaka a ap koule nan mi blòk la pa deyò strikti konpòs la.



**Foto K108:**  
Dren pou ji yo, soti nan 2 konpatiman strikti  
konpòs la pou rive nan yon sèl droum 15 galon.



**Foto K109:**  
Dren 2 konpatiman ki  
rive nan yon sèl droum  
15 galon.



**Foto K110:**  
Ji kaka ap koule nan espas  
ki anba dren an.



Foto K111:  
Konstriksyon  
mi deyò yo.



Foto K112:

Konstriksyon  
mi anndan yo.



Foto K113:

Y ap plen mi yo ak bagas ANVAN  
yo kòmanse vide droum yo.



Foto K114:

Twati an bwa strikti Mk.X la.



Foto K115:

Twati Mk. X la pa anndan.



Foto K116:

Strikti a ki fini  
pa deyò, nou  
ka wè ti  
chimen an  
beton an  
toutotou strikti  
a.





Foto K117:

Ji kaka ap koule nan mi an blòk la epi anba dren an nan strikti konpòs Mk.VIII la.



Photo K118:

Juskaka leaking through the rendered walls of the Mk. IX compost structure.



Foto K119:

Reparasyon ki fèt sou mi deyò a pou rete ji kaka k ap koule a.



Foto K201:

Y ap ranfòse sou kote strikti  
konpòs la ak bagas.

Foto K202:

Y ap konstwi  
pil konpòs la:  
y ap vide  
droum  
poupou yo.



Foto K203:

Konstriksyon  
pil konpòs la:  
y ap ajoute  
bagas.







Foto K204a:

Bèt endezirab sou pil konpòs la.



Foto K204b:

Yon pil konpòs ki kouvri ak griyaj poul.



Foto K204c:

Y ap remete ji kaka a sou pil konpòs la.



Foto K204d:

Y ap pran tanperati pil konpòs la.



Foto K205a:

Stokaj droum pou pou yo.



Foto K205b:

Y ap mete droum pou pou yo anndan strikti konpòs la.



Foto K206a,b:

Zòn pou netwaye droum yo oubyen “kawach”, strikti ak twati epi strikti san twati.



Foto K207a,b,c:  
Y ap netwaye droum yo.



Foto K208:

Pyèj pou bagay di yo, nan zòn pou netwaye droum yo.



Foto K209:

Lè yo pa respekte “règ 20 droum” nan, sa bay move kondisyon liyèn pou netwaye droum yo.



Foto K210:

Droum sal bò kote zòn pou netwaye droum yo, toupare pou yo lave yo.



Foto K211:

Yon zòn byen delimite pou stoke droum pwòp yo nan lonbraj yon pye mango.



Foto K212:

Yon pil konpòs konpakte nan fen faz 1 konpostaj la.







Foto K213 a, b, c:

Deplase yon pil konpòs a la men pran anpil tan, se anpil travay e sa koute chè.



Foto K214a,b,c:

Y ap fè ran faz 2 yo ak yon traktè.



Foto K216:

Egzanp ran konpòs nan Gran Manye, Okap.



Foto K215:

Yon ran konpòs SOIL



Foto K217:

Kote pou lave soulye ak dlo kloròks.

Foto K218a,b:  
Estasyon pou spre machin yo ak kloròks.



Gid SOIL la pou Asenisman Ekolojik®

Premye Edisyon, Fevrye 2011



Foto K219a,b,c:

Y ap spre kamyon ki pote droum pou pou yo nan yon kawach.