



Finance - Development Southern concepts
Tel: 020-7088 8888 in Africa


URINE DIVERTING DRY TOILETS

CORON MA POKO LAC KI CET PAT PAT DOK TWOYO CET WOKO.



Faeces should be directed into the squat hole and the urine into the urine diversion.

Wek oet ma ipweyolo opot i bur ne ki lsa bene odony i bur ne.

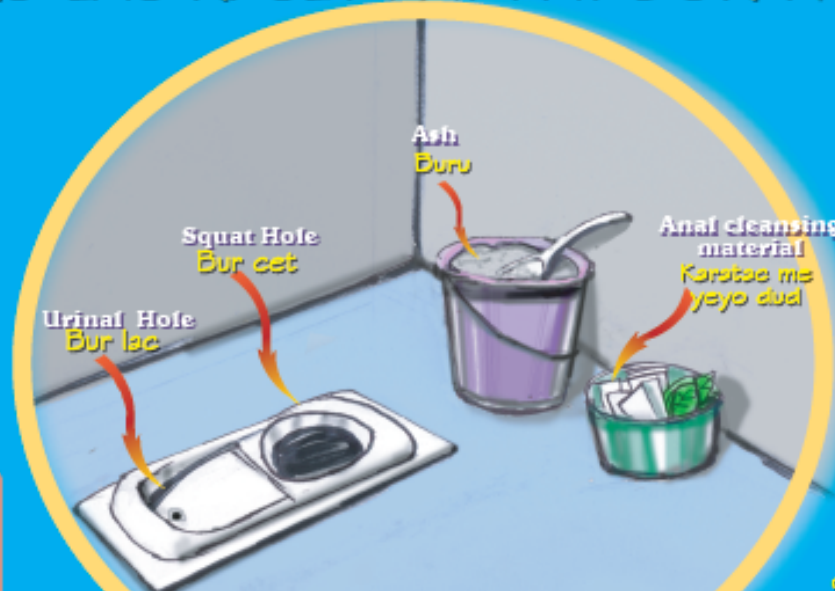

Ecosan Toilet Details

Ngec matut malube ki tic ki coron Ecosan



When the basket is totally full, it is set aside for six months to ensure that all pathogens are killed.

Ka baket esuku oet i dong obyeko pong maber, omyero ki kwany kiket cen pi diwe abicel wek kwidi weng ma bye icet otoo woko.



Throw anal cleansing material such as soft paper and leaves into the squat hole.

Bol karatse ma igeyo ki dud i bur oet.



Always add enough ash on top of faeces after every use to guard against flies, foul smell and kill pathogens.

Inge konye ni, ony buru ni oet wek ogeng lwangi ngwee oet ki noko kwidi ma bye i oet.



Clean toilet with ash and avoid water entering into the squat hole

Ywe poron ki buru dok bene pe lwek pii odong ibur oet.



Although it is a good control to have a cone piling up, when it approaches the squat hole push it side ways to utilise the whole basket. Kadi bed ber me wek oet odure iwi wadi, ento ka dong outo ka pong, omyero lyar woko wek baket opang maber dor pe oyaboyot.



Wash your hands with soap after use
Lwok cingi ki cabun inge tic ki coron.



After the six months, the contents are safe and ready to use in the gardens as a rich and cheap manure.

Inge diwe abicel, kitwero bio kwede ipot wek omed moc ngom me ceko cam.

